

CANON® IMAGERUNNER C3200

TONER CARTRIDGE REMANUFACTURING INSTRUCTIONS



CANON IMAGERUNNER C3200 TONER CARTRIDGE

REMANUFACTURING THE CANON IMAGERUNNER C3200 SERIES TONER CARTRIDGE

By Mike Josiah and the Technical Staff at UniNet



The Canon Imagerunner C3200 series toner cartridges are rated for 25,000 pages black and color. The OEM cartridge part numbers are 7629A001AA (black), 7628A001AA (cyan), 7627A001AA (magenta), and 7626A001AA (yellow). All are GPR-11 cartridges. There is a chip that has to be replaced each cycle.



1. Take a long common (flat) screwdriver and insert it into the top two holes on the label end cap. Place the edge of the screwdriver against the plastic weld and snap the weld off in both places. This may have to be done multiple times from different angles.



2. Remove the Cartridge ID label from the end cap.



3. Remove the two remaining welds in the same manner as Step 1.



4. Remove the end cap.




5. Remove the fill plug and clean out all remaining toner.



6. Fill the hopper with new Canon C3200 toner and replace the fill plug.



7. Install the end cap on the cartridge. An easy way to do this is to place four drops of hot glue on the four broken posts. Quickly place the end cap on before the glue dries. If further help is necessary to keep the end cap on, black tape along the seam works well.

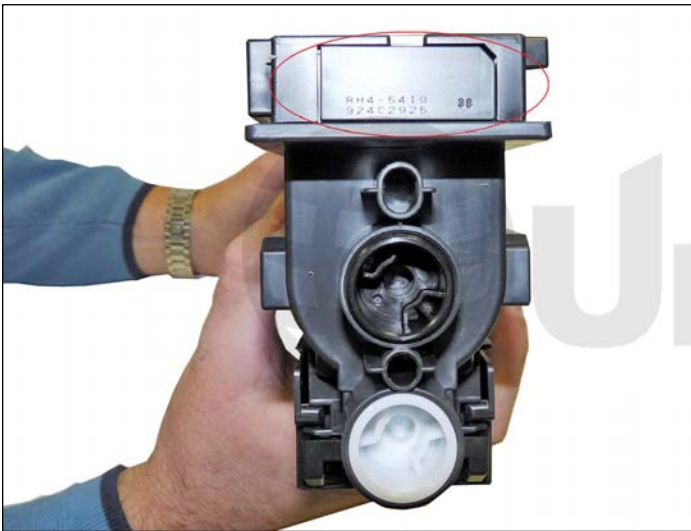

8. Replace the chip from the opposite end of the cartridge. This chip is an RF type that is encased in the same type plastic housing as the HP 4100 chips are. The chip is different though!