## EPSON<sup>®</sup> LP-S5000 EASY TO REMANUFACTURE CARTRIDGE INSTRUCTIONS



## EPSON LP-S5000 TONER CARTRIDGE



© 2012 UniNet Imaging Inc. All trademark names and artwork are property of their respective owners. Product brand names mentioned are intended to show compatibility only. UniNet Imaging does not warrant downloaded information. Unauthorized sale, reproduction or distribution of this article is prohibited. For additional support, please contact techsupport@uninetimaging.com

## REMANUFACTURING THE EPSON LP-S5000 TONER CARTRIDGE


By Mike Josiah and the Technical Staff at UniNet



The Epson LP-S5000 cartridges are rated for 6,500 pages black and color.

The OEM numbers are LPCA3T12K Black, LPCA3T12C Cyan, LPCA3T12M Magenta, and LPCA3T12Y Yellow.

There is a chip that must be replaced every cycle.

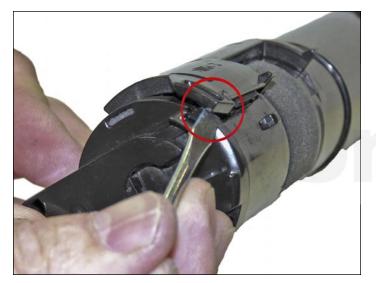

1. Carefully pry up the locking tab on the toner port.

Slide the cover off the lock.



2. Slide the entire cover back to open up the ports.





3. Vacuum the tube clean through the second port and fill with toner for use in the Epson LP-S5000. Leave the fill plug and the first port alone as it contains developer.



4. Fill the second port with toner for use in the Epson LP-S5000.



5. Seal both ports with a new seal, or use a clear tape.





6. Pry up the chip cover, and then the chip from the end cap and replace.



7. Slide the port cover back in place.

