

PANASONIC® KXFA75

DRUM UNIT REMANUFACTURING INSTRUCTIONS

REMOVING THE PANASONIC KXFA75 DRUM

By Javier Gonzalez and the Technical Staff at UniNet



1. Insert a small screw into the drum pin hole shown, turning it clockwise until it anchors in place. Using a pair of needle-nose pliers, grasp the exposed portion of the screw.



2. Pull until the drum pin is completely out.

Repeat the same steps on the opposite end of the drum.