

HP® LASERJET CP1025

DRUM UNIT REMANUFACTURING INSTRUCTIONS



HP CP1025NW DRUM UNIT (CE314A)

REMANUFACTURING THE HP LASERJET CP1025 (CE314A) OPC DRUM UNIT

By Enrique Stura and the Technical Staff at UniNet

REQUIRED SUPPLIES

1. New OPC drum
2. New chip
3. Conductive grease, OPC/wiper lubricant
4. Cotton swabs, cleaning cloth
5. 99% Isopropyl alcohol

REQUIRED TOOLS

1. Phillips screwdriver medium size
2. X-acto knife
3. Toner approved vacuum
4. Small needle-nose pliers




1. On the right side, remove both Phillips screws and end cap.




2. Repeat the same work on the left side.




3. Carefully remove the OPC drum.

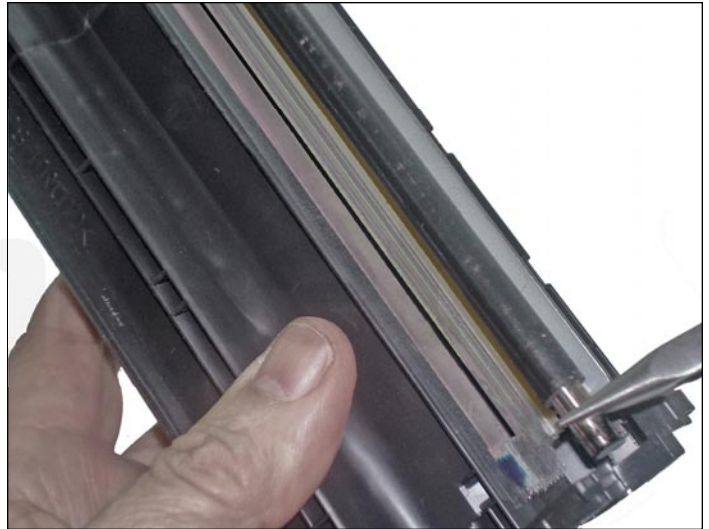

4. Remove the PCR, and clean with a soft cloth.

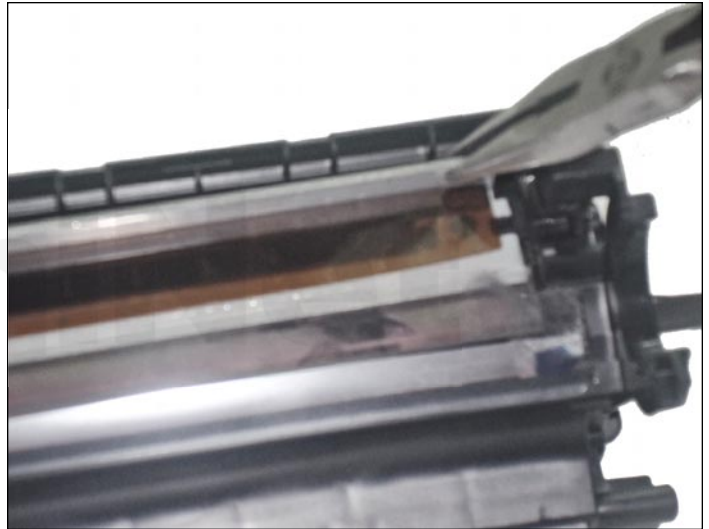


5. Remove both screws below the transparent sealing blade, and take the wiper blade out.


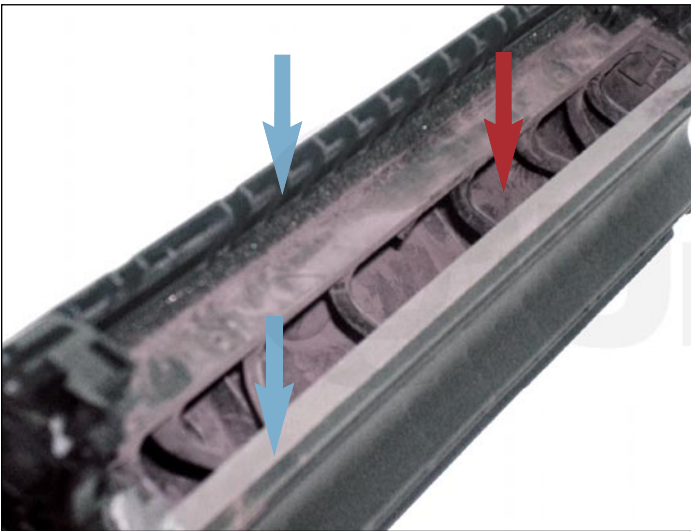


6. Dump all toner and vacuum remainings from the waste bin and surroundings.

Inspect the seal for the wiper and integrity of the recovery blade.

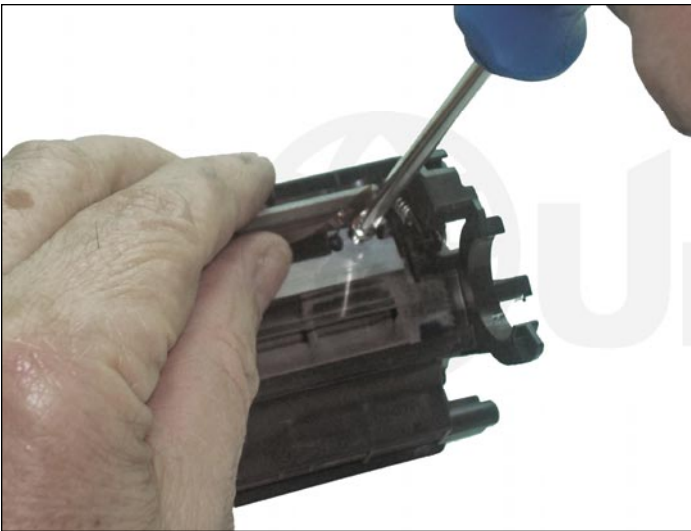

7. Clean the wiper blade with a lint-free cloth, lubricate the working edge with your preferred powder and install in place.

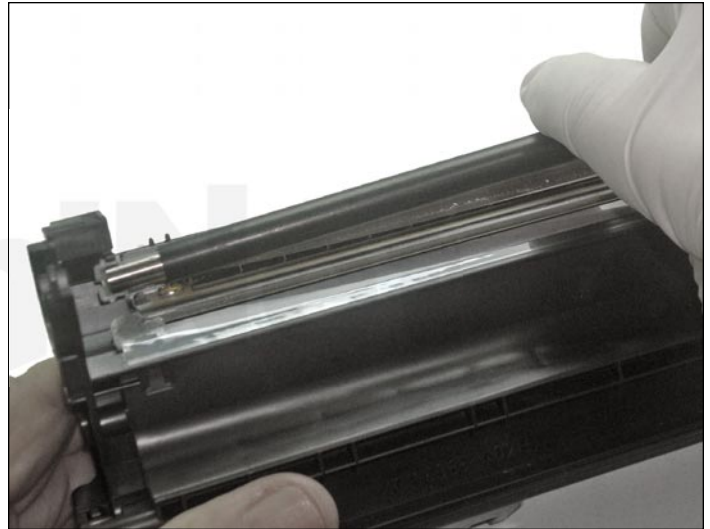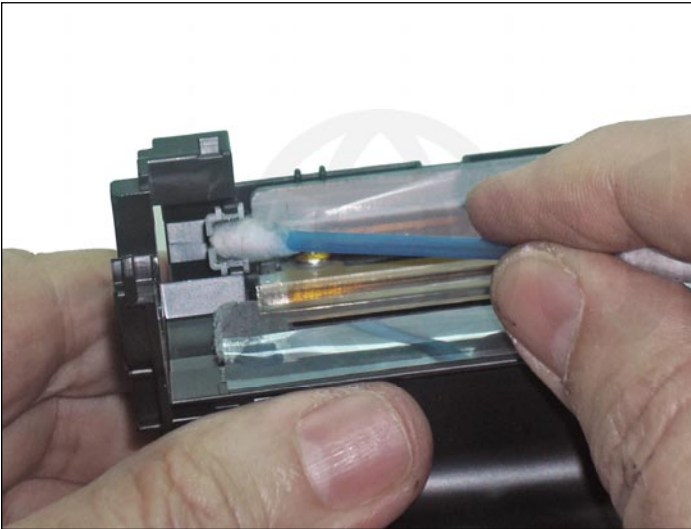



8. Clean the old grease from the PCR mounts using a cotton swab and isopropyl alcohol.

Apply minute quantities of conductive grease on both mounts.


Install the PCR.




9. Install the new OPC drum with the drive gear to the right

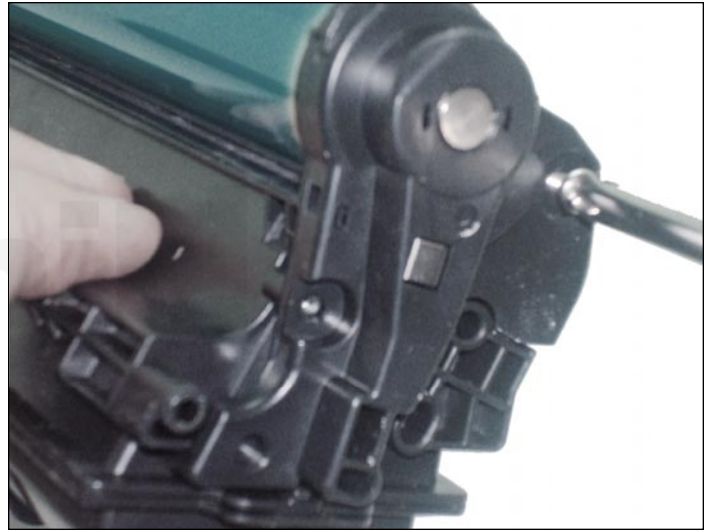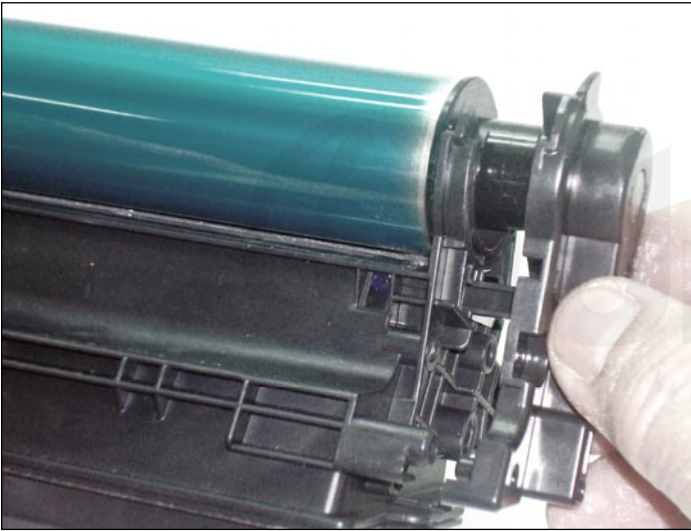

10. Clean the short OPC shaft on the left end cap and lubricate the tip with conductive grease. Install the end cap ensuring the PCR contact appears through the opening of the end cap, and secure it with the two Phillips screws.

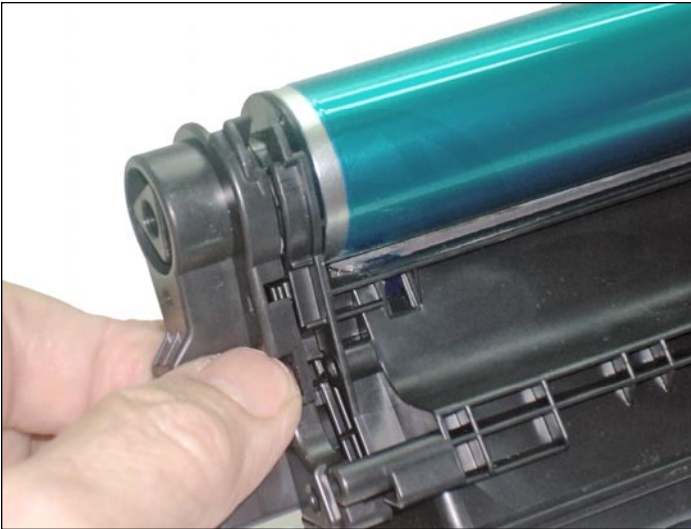

11. Install and tighten the right end cap.

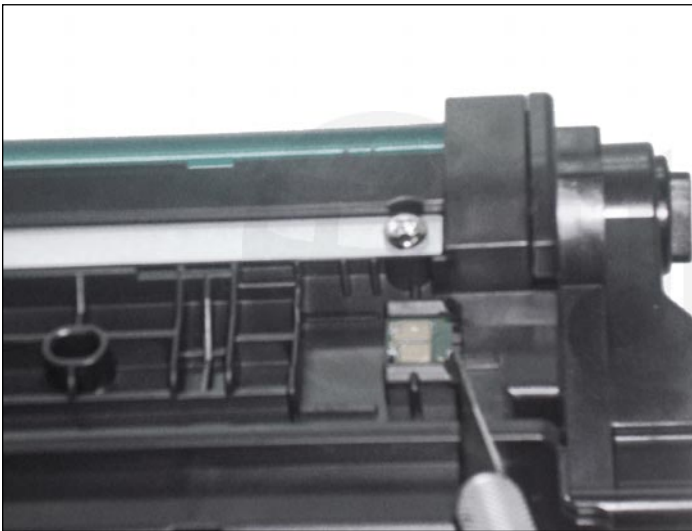

12. Cut both ends of rails securing the existing chip, and replace with the new chip.